

TravelPilot DX-N

● **BLAUPUNKT**
TravelPilot DX

Operating instructions



● **BLAUPUNKT**
Bosch Gruppe





The TravelPilot DX-N has been designed for use in cars.

Such special information as height restrictions or maximum permissible loads as required for lorries or busses have not been included on the navigation CDs.



Using the system while driving

If you do not pay attention to the current traffic situation at all times, you could easily cause serious traffic accidents.

To avoid being distracted by the TravelPilot DX-N, please observe the following information:

- **Before you use the system for the first time, make yourself familiar with the TravelPilot DX-N and its operation.**
- **Find a suitable place to stop when you would like to re-program the TravelPilot DX-N.**
- **Never operate the TravelPilot DX-N while driving unless the traffic conditions permit.**
- **Do not make a destination entry unless your vehicle is stationary.**

Contents

Safety Information	2	Entering destinations	15	Route guidance in the arrow symbols mode	24
General Information	5	Entering the destination when you know the address	15	Overview	24
About these operating instructions .	5	Selecting a town centre (part of town) as your destination	16	Activating the symbol display mode	24
Accessories	5	Entering a house number	16	Route guidance with map display ..	25
How navigation works	6	Selecting surrounding destinations (car parks, petrol stations, etc.)	17	Activating the map display	25
Switching the unit on	6	Selecting non-urban destinations (motorway exits, service stations, airports or border crossings)	18	Overview	26
Operating introduction	6	Entering destinations in map mode ..	19	Selecting the information map (Destination area, Overview)	26
Theft protection system	7	Altering the scale	19	Selecting the current position map (North, Automatic, Junction zoom)	27
Switching the TravelPilot DX-N off	7	Starting route guidance	20	Adjusting the map scale	27
Quick Reference	8	Saving the destination on the map before starting route guidance	20	Information on the map	28
Marking menu items	8	Destinations in the destination memory	21	Driving time and driving distance on the map	29
Selecting menu items	8	Selecting a destination from the destination memory	21	Selecting the display mode for Day/Night/Off	30
Exiting menus	8	Route guidance	22	Using the traffic congestion function	31
Direct destination entry in 10 steps .	9	Starting route guidance	22	Activating the traffic congestion function	31
Saving the current destination with a short name before beginning route guidance	11	Restarting interrupted route guidance	22	Cancelling a traffic congestion detour	32
An example of route guidance using the map display	12	Adjusting the volume of the voice output	23	Excluding roads from the route list	32
Altering the route options before beginning route guidance	12	Requesting destination and route information	23	Cancelling road exclusions on the route list	33
Switching to map display	13	Viewing the route list	23		
Altering the map scale	13				
Displaying information on the map	13				

Dynamic route guidance with TMC	34	Tour memory	43	Selecting the display mode for Day/Night/Off	51
Switching TMC on/off	34	Entering tour destinations	43	Selecting another source	51
Selecting a TMC station	35	Entering new tour destinations ...	43	Basic settings	52
Displaying travel information	36	Retrieving destinations from the destination memory	44	Activating/deactivating the security code	52
Calculating the route with TMC while route guidance is in progress	36	Using the last destination used for navigation	44	Switching the operating introduction on/off	52
Selecting route options	37	Sorting the tour list	45	Activating TV/Video	52
Altering route options prior to route guidance	37	Deleting tour destinations	45	Activating the reversing camera ..	53
Activating/deactivating route options	37	Deleting the whole tour	46	Switching the Quick info on/off ...	53
Altering the route options while route guidance is in progress	38	Starting route guidance to a tour destination	46	Other settings	54
Saving your settings	38	Travel guides	47	Setting the standby time	54
Destination memory	39	Activating a travel guide	47	Displaying the system version	54
Accessing the destination memory	39	Other functions	48	Entering your current vehicle position manually	54
Saving destinations	40	Map display without route guidance	48	Activating the demonstration mode	55
Saving your current destination with a name	40	Displaying the GPS status and your position	48	Deactivating the demonstration mode	55
Saving your current vehicle position as a destination	40	System settings	49	Calibration settings	56
Deleting destinations from the destination memory	41	Accessing the main menu for system settings	49	Calibration after changing the tyres	56
Deleting a single destination	41	Audio/video settings	49	Installing the system again	56
Deleting the last destinations	41	Selecting the language	49	Displaying the calibration status ..	57
Clearing the destination memory ..	42	Adjusting the volume for voice output	50	Appendix	58
Sorting the destination memory	42	Adjusting additional volume options	50	Available navigation CD-ROMs	58
				Available travel guide CD-ROMs	58
				Changing the navigation CD-ROM ..	58

General Information

About these operating instructions

These operating instructions were written to provide you with information on the operation and functions of your TravelPilot DX-N and to allow you to operate the equipment easily and correctly.

Please read these instructions carefully before you use your TravelPilot DX-N for the first time and keep them handy for future reference in the car.

To allow you to find information quickly and easily, the following icons have been used in these instructions to indicate the individual steps:

- 1. ... This icon indicates steps you must perform in order to complete a function.
- ✓ The way in which the equipment should react after you perform a function is indicated like this.
- Plus Point: This indicates special information and tips on how to use the TravelPilot DX-N.

Accessories

For dynamic navigation (automatic detours around traffic congestion), the TravelPilot DX-N must be connected to a TMC source (**T**raffic **M**essage **C**hannel). It is possible to purchase a “TMC D-Namic tuner box” as an accessory to receive TMC data. You can also use the TMC data received by a Blaupunkt car radio.

To find out which Blaupunkt car radios are equipped to receive TMC data and relay this information to the TravelPilot DX-N, please contact your Blaupunkt specialist dealer or ring the Blaupunkt telephone hotline.

The hotline number is listed on the last page of these instructions.

How navigation works

Your TravelPilot DX-N uses GPS, a satellite-supported locating system, to determine the current position of the vehicle. GPS stands for **G**lobal **P**ositioning **S**ystem, a system which can be used to reliably determine your location anywhere in the world. A “gyroscope” and the electronic speedometer signal are also used to track the vehicle’s movements. The TravelPilot DX-N navigation system compares this data with the data stored in digital form on the navigation CD-ROM and uses it to calculate the routes in route guidance.

If the TravelPilot DX-N is connected to a TMC source (“TMC D-Namic tuner box” or appropriately equipped car radio), it will be able to take the current traffic situation into account when calculating the route. For more information on TMC, please refer to the section on “Dynamic Route Guidance with TMC”.

Switching the unit on

If the TravelPilot DX-N has been properly connected to the vehicle ignition and continuous plus, the TravelPilot DX-N will switch on automatically when you start your vehicle.

Operating introduction

When the system is started for the first time, an operating introduction explaining the functions of the remote control will appear. Then you can select whether or not this introduction is shown each time the TravelPilot DX-N is switched on.

- **Plus Point:** You can activate or deactivate the operating introduction at any time in the “Settings” menu. For more information, please refer to the section on “Settings”, “Switching the operating introduction on/off”.



Theft protection system

It is possible to activate a coding for your TravelPilot DX-N so that the TravelPilot DX-N cannot be operated after it has been disconnected from the battery (e.g. in the event that it is stolen).

If the coding is active, it will be necessary to enter the code number before the unit can be operated again after it has been disconnected from the battery. You will find the code number in the TravelPilot DX-N equipment passport. **Never keep this passport in your vehicle!**

For more information on activating/deactivating the coding and how to switch on coded equipment after it has been disconnected from the battery, please refer to the section on “Settings”, “Activating/deactivating the safety code”.


- Plus Point: This electronic theft protection system prevents unauthorised persons from using the TravelPilot DX-N after it has been removed from the vehicle.

Switching the TravelPilot DX-N off







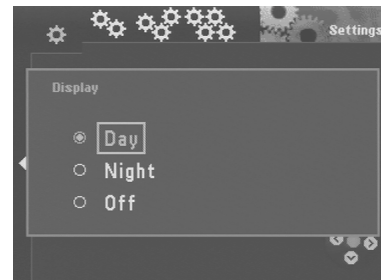

For technical reasons, it is not possible to switch the TravelPilot DX-N off. If necessary, you can switch off the TravelPilot DX-N display in the “Settings” menu.

1. Use on the remote control to mark “Settings” in the main menu. Press .
The “Settings” menu will appear. ✓
2. Select “Display” and press .
3. Mark “Off” and press .

Press any one of the keys to reactive the display.




The keys on the remote control unit are used to operate the TravelPilot DX-N.

-  OK; selects menu items
-     Arrow keys; move the cursor
-  Backspace key; exits the menus
-  Traffic Congestion key; activates the menu for dynamic route guidance and manual detours to avoid traffic congestion.
-  Info key; repeats the last voice output for navigation and activates the Information menu. In lists, entries which are followed by ... are shown in full.

Marking menu items


Use   and   on the remote control to move the selection bar.


-  Plus Point: The operating assistant (marking in the illustration) uses a yellow marking to indicate which keys on the remote control can be used in the current menu.

Selecting menu items

Press  on the remote control to select a marked menu item.

Exiting menus

If you would like to exit a menu, press  on the remote control.

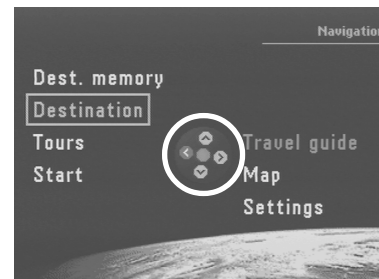

Quick Reference

The following three examples have been included to familiarise you quickly with the basic functions of the TravelPilot DX-N:

- Direct destination entry in a city indicating the street and a junction
- Entering a name for the destination and saving it in the destination memory
- Route guidance using the map: altering the map scale and the map information

For more information on entering destinations, please refer to the section on “Entering destinations”.

Direct destination entry in 10 steps


The following is an example of how to enter a destination.


City/town: Berlin

Street: Alexanderplatz




Junction: Alexanderstraße

City/town:

1. Switch on the vehicle ignition.
The main menu will appear. ✓
 2. Select “Destination” in the main menu. Press **OK**.
The “Destination” menu will appear. ✓
 3. Mark  (city/town icon). Press **OK**.
The character set used to enter the name of the city/town will appear. ✓
 4. Use **<** **>** **^** **v** on the remote control to mark the letter “B”. Press **OK**.
The first city/town starting with the letter “B” will appear on the list (below the character set). ✓
- Plus Point: With each letter you enter in the name, the list will automatically forward to the corresponding place names. This helps you to find the name of the city/town you are looking for quickly.

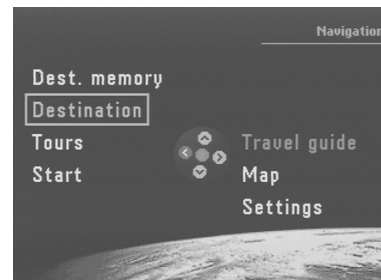


5. Mark the letters "E", "R", "L" and "I" one after the other and press **OK** for each letter.
"BERLIN" will appear on the list. ✓
6. To switch to the place names list, mark "OK" in the character set and press **OK**.
The place names list will appear. ✓
- Plus Point: To switch to the place names list quickly, press **OK** for longer than 2 seconds.
7. Mark "BERLIN" on the place names list. Press **OK**.
Because Berlin is listed twice for Germany (as the capital city and as a part of Segeberg), an additional menu to specify the city/town will appear. ✓
8. Mark "BERLIN" in the selection menu. Press **OK**.
The "Destination" menu will appear again on the screen. ✓

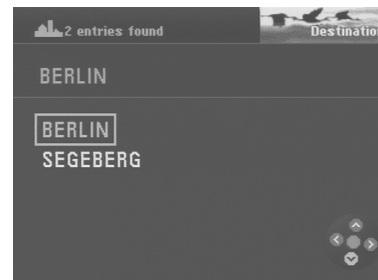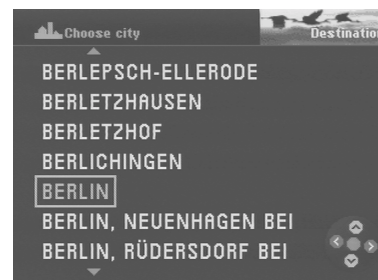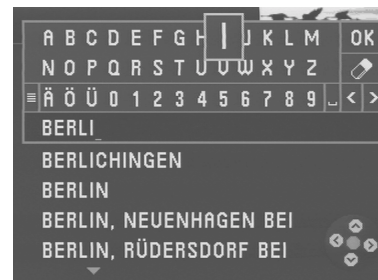


Quick Reference

Street:

9. The selection bar will automatically mark  (street icon) in the “Destination” menu. Press **OK**.
The character set used to enter the street name will appear. ✓
Enter the letters for “Alexanderplatz” in the same way as described for entering the city/town.



Junction:

10. The selection bar will automatically mark  (junction icon). Press **OK**.
The selection list displaying the available junctions will appear. ✓
Select “ALEXANDERSTRASSE”. Press **OK**.
The “Destination” menu will appear. ✓
The selection bar will mark “Start”. Now you can press **OK** to activate route guidance.

- Plus Point: After you have entered your destination completely and before you begin route guidance, it is possible to save the destination in the destination memory.

Saving the current destination with a short name before beginning route guidance

1. Select “Store”. Press **OK**.
The character set used to enter the destination name will appear. ✓
2. Enter a name for your destination, e.g. “HOTEL”, as described above.
3. Mark “OK” in the character set and press **OK**.
The “Store destination” menu will appear. ✓
4. Use **▲ ▼** to move the name of the destination to the position in which you would like to save it in the destination memory. Press **OK**.
The main menu will appear. ✓

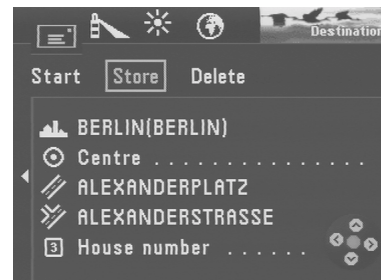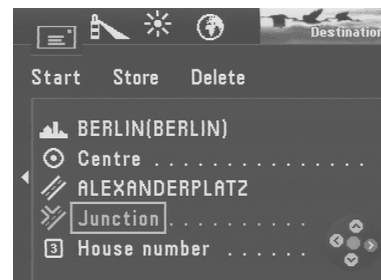

An example of route guidance using the map display



After you have entered your destination, you can start route guidance.

1. Select "Start". Press **OK**.
A menu indicating the data on the current destination will appear. ✓
You will hear the following voice output: "The route is being calculated." You can use this menu to alter the route options.
- Plus Point: You can alter the route options at any time while route guidance is in progress. For more information, please refer to the section on "Selecting route options", "Altering route options while route guidance is in progress".

Altering the route options before beginning route guidance

The example of route guidance will be calculated using the route options for "Short route" and "Avoid motorways".

2. When the menu indicating the destination data appears on the screen, the selection bar will mark the "Change route options" menu item. Press **OK**.
The "Change route options" menu will appear. ✓
3. Move the selection bar to "Short route" and press **OK**.
You have now selected the "Short route" option. ✓
4. If "Motorway" is activated (a checkmark will appear in the box), move the selection bar to "Motorway" and press **OK**.
"Motorway" will be deactivated. There will no longer be a checkmark in front of "Motorway". ✓
5. Mark "Start" and press **OK**.
You will hear the following voice output: "The route is being calculated." ✓
After the route has been calculated, route guidance will begin. You will hear the first spoken driving recommendation for route guidance. The system will use the display mode selected last (arrow symbol route guidance or map display).

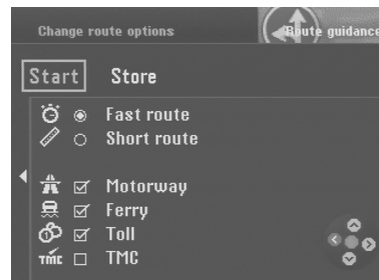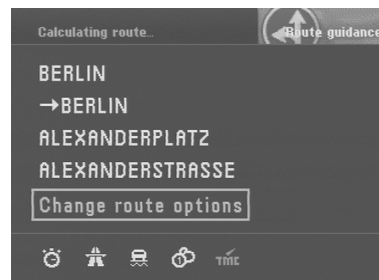

Quick Reference

Switching to map display

6. If the display mode used last was arrow symbol route guidance, you can switch to map display as follows: Press **OK** while route guidance is in progress.
A selection menu will appear at the bottom left-hand edge of the screen. ✓
 7. Select "Map" and press **OK**.
The map display will appear. ✓
- Plus Point: You can use the selection menu while route guidance is in progress to switch quickly back and forth between the symbol and map display modes.



Altering the map scale

If your destination is located at a considerable distance away from your current position, you may want to select a map scale which offers you a better overview of your complete route. Once you get closer to your destination, you can alter the map scale to obtain more detailed information on the area surrounding your destination.

8. Press **▲** while the map is on display.
A window in which you can alter the map scale will appear. ✓
9. Use **▲** **▼** to select the desired map scale. Press **OK**.
The map will appear in the scale selected. ✓




Displaying information on the map

As you get closer to your destination, you can have such additional information as the locations of parking garages, public institutions or petrol stations displayed on the map.

In this example of route guidance, parking garages/car parks and petrol stations will be displayed on the map.



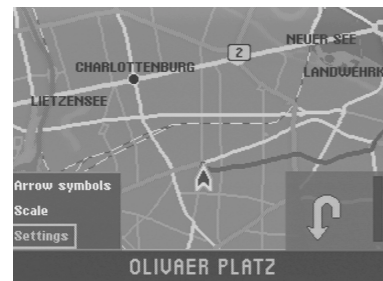

10. Press **OK** while route guidance is in progress.
A selection menu will appear at the bottom left-hand edge of the screen. ✓
11. Select “Settings” and press **OK**.
The “Settings” menu will appear. ✓
12. Select “Map info” and press **OK**.
The “Map info” selection menu will appear. ✓
Use **V** to select the “Car park” menu item and press **OK**.
A checkmark will appear in the box to the left of the menu item. ✓
13. Plus Point: You can easily tell whether an option is active or not; if it is, there will be a checkmark in front of the menu item.
13. Use **V** to select the “Petrol station” menu item and press **OK**.
A checkmark will appear in the box to the left of the menu item. ✓
14. Use **^** to select “OK” in top line of the menu. Press **OK**.
The display will return to the “Settings” menu. ✓
15. Plus Point: In menus with a triangle on the left edge (marking in the illustration) you can move directly to the top line if you press **<**.
15. Press **→** on the remote control.
The map display with the icons selected will appear. ✓
16. When you have reached your destination and route guidance ends, the map display will remain active. If you would like to enter a new destination, press **→**.
The main menu will appear. ✓

For more information on route guidance and a detailed description of route guidance and display modes, please refer to the section on “Route guidance”.




Entering destinations



Using the four icons on the top line of the “Destination” menu you can enter your destination in the following ways:

-  Use the envelope icon to enter your destination directly with the exact address using the following menu items: “City” - “Centre” - “Street” - “Junction” - “House number”.
-  Use the lighthouse icon to select from a list of destinations in the surrounding area, such as car parks, hospitals, petrol stations, train stations and other public facilities. A list of destinations in the surrounding area can be activated for your current location, for the last destination entered for navigation and for the area surrounding the destination currently selected.
-  Use the sun icon to make a selection directly from four categories for non-urban destinations: motorway exit, motorway service station, airports and border crossings.
-  Use the globe icon to enter a destination directly on the map.

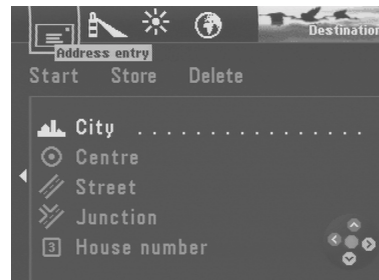In addition, you can also recall a saved destination from the destination memory to use as your new destination.







Entering the destination when you know the address


1. Select “Destination” in the main menu. Press . The “Destination” menu will appear. ✓
-  **Plus Point:** Each time you access the “Destination” menu, the envelope will automatically be selected for the direct entry of an address.

You can find an example of how to directly enter an address with a town, street and junction in the Quick Reference text. You can also enter a part of the town (town centre) or a house number as part of the address.

Selecting a town centre (part of town) as your destination



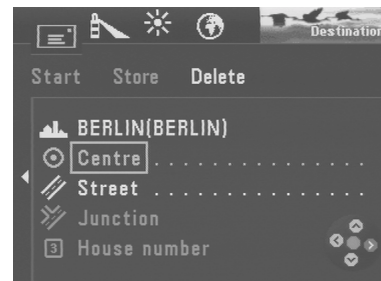

In large cities you can also enter a part of the city as your destination. In smaller towns, this menu item allows you to enter the town centre as your destination because entering a street might not always be possible.

1. To enter a town centre as your destination, first enter the town.
The “Destination” menu will appear. ✓
2. Mark  (icon for the centre). Press .
Now you will see a list of the city centres available (for a maximum of 12 entries) or a character set (for more than 12 entries). ✓
3. If you see a character set, enter the name of the centre you wish to select or confirm an existing entry. Then access the list of centres.
4. Mark the centre you wish to select. Press .
The “Destination” menu will appear. ✓
The selection bar will be positioned on “Start”. Now you can press  to start route guidance. For more information, refer to the section on “Route guidance”.



Entering a house number


In larger cities, it is possible to add a house number to the information on the destination address. This will not be possible unless the corresponding data for the selected city is available on the navigation CD.

1. First enter the city and the street.
2. Mark  (icon for the house number). Press .
A list indicating blocks of house numbers will appear. ✓
3. Select the correct block of house numbers from the list. Press .
The “Destination” menu will appear. ✓
The selection bar will be positioned on “Start”. Now you can press  to start route guidance. For more information, refer to the section on “Route guidance”.




Entering destinations

Selecting surrounding destinations (car parks, petrol stations, etc.)


Use  (the lighthouse icon) to select your destination from a variety of surrounding destinations. You can select this list to refer to your current location ("Location"), to the last destination you entered for navigation ("Last destination") or to any town/city you choose ("Surrounding area"). The destinations on the list for your "Location" and "Last destination" are sorted according to their distance away; for "Surrounding area" the destinations are sorted alphabetically.

- **Plus Point:** This feature makes it easy for you to find the nearest petrol station, for example.


The surrounding destinations available will vary, depending on the location or destination surroundings and cover an area within a radius of approx. 20 km (for airports up to 80 km) around your current vehicle position.



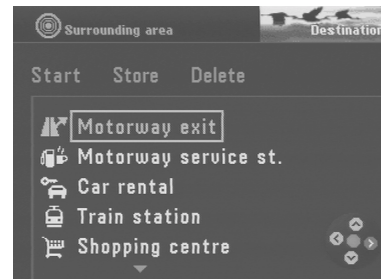


1. To select a surrounding destination, select  in the "Destination" menu. Press **OK**.
The "Surrounding dest." menu will appear. ✓
2. Move the selection bar to the desired reference point ("Location", "Last destination" or "Surrounding area"). Press **OK**.
3. If you select "Surrounding area", you must have first entered the place at which you want to select a surrounding destination.

- **Plus Point:** Enter the destination here in the same way as described for the direct destination entry.
Once you have determined the town/city, the list of destinations will appear. ✓
4. Select the desired surrounding destination. Press **OK**.
The list of available destinations will appear. ✓
 5. Select the desired destination. Press **OK**.
The name of the destination will appear in a menu. ✓
The selection bar will be positioned on "Start". Now you can press **OK** to start route guidance. For more information, refer to the section on "Route guidance".



Selecting non-urban destinations (motorway exits, service stations, airports or border crossings)


Use  (the sun icon) to select motorway exit points, service stations, airports and border crossings throughout the whole country. All you are required to know is the name.








1. Select  on the top line of the “Destination” menu. Press .
A list of the available non-urban destinations will appear. ✓
2. Select the desired menu item. Press .
The character set used to enter the name of the destination will appear. ✓
3. Enter the name of the destination.
 Plus Point: Enter the destination here in the same way as described for the direct destination entry.
After you have selected the destination, the destination name will appear in a menu. ✓
The selection bar will be positioned on “Start”. Now you can press  to start route guidance. For more information, refer to the section on “Route guidance”.



Entering destinations

Entering destinations in map mode




Use  (the globe icon) to determine a destination for navigation in map mode.

1. Select  on the top line of the "Destination" menu. Press .
A map which indicates north facing up will appear. ✓
The map will show the surroundings of the last active destination. If no destination has been entered, the map will indicate the current vehicle location.
Use the cross wires to select the destination.
 2. Use     on the remote control to move the cross wires in the direction of the desired destination.
The cross wires will move across the display. ✓
If you move the cross wires over the edge of the map, the next section of the map will appear automatically.
-  **Plus Point:** Depending on the map scale, the name of the street or the name of the town/city over which the cross wires are passing will appear on the line below the map.



Altering the scale

If the destination is far away from your current location, you can alter the map scale, allowing you to move the cross wires quickly over long distances.

1. Press  while the map is on display.
A selection menu will appear. ✓
2. Select "Scale". Press .
A window you can use to alter the map scale will appear. ✓
3. Select the desired scale. Press .
The map will appear in the new scale. ✓

Starting route guidance

Once you have determined the destination on the map, you can start route guidance directly.

1. Press **OK** to access the selection menu.
2. Select "Start". Press **OK**.
A menu containing the data on the current destination will appear. ✓
You will hear the following voice output: "The route is being calculated.". You can also alter the route options in this menu.
For more information, refer to the section on "Selecting route options" and "Route guidance".



Saving the destination on the map before starting route guidance

If you have marked the destination with the cross wires, you can save it in the destination memory and use it for route guidance later.

1. Press **OK** to access the selection menu.
2. Select "Store". Press **OK**.
The character set used to enter a short name for the destination will appear. ✓
3. Enter a short name for the destination and press **OK** for longer than 2 seconds to exit the character set.
The "Store destination" menu will appear. ✓
4. Use **▲** **▼** to move the short name to the desired position in the destination memory. Press **OK**.
The main menu will appear. ✓


Entering destinations




 



Destinations in the destination memory




The destination memory is used to save frequently used destinations, to give them a short name (for identification purposes) and to recall them at a later date for route guidance.

- Plus Point: The TravelPilot DX-N automatically saves the last 12 destinations used.

Selecting a destination from the destination memory

Starting point: You are currently in the main menu. If not, press  to return to the main menu.

1. Select "Dest. memory" in the main menu. Press .
The "Dest. memory" menu will appear. ✓
The icons in the top icon bar represent:
 -  Memory for the last 12 destinations
 -  Individually sorted destination memory
 -  Alphabetically sorted destination memory
 -  Edit destination memory (delete, save and sort destinations)
2. Select the icon of the destination memory you want to use. Press .
The destinations saved there will appear. ✓
3. Select the desired destination. Press .
A menu containing the data on the current destination will appear. ✓
You will hear the following voice output: "The route is being calculated." You can also use this menu to alter the route options.
For more information, read the sections on "Selecting route options" and "Route guidance".

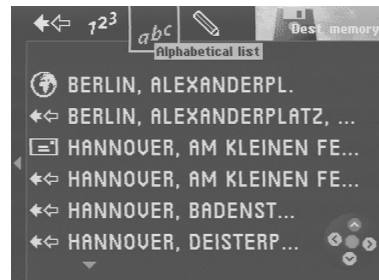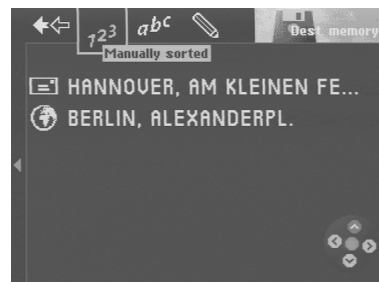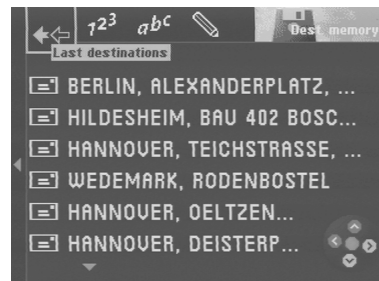

There are two display modes available for route guidance. You can select between route guidance using arrow symbols and route guidance using a map.

- Plus Point: Regardless of which display mode you choose, a friendly voice will always remind you when it is time to make a turn.

After you have started route guidance and the route has been calculated, route guidance will begin using the display mode selected last.

Starting route guidance

Once you have entered your destination, you can start route guidance.



1. Mark "Start" on the top line of the menu. Press **OK**.
A menu containing the data on the destination selected will appear. ✓
You will hear the following voice output: "The route is being calculated." As soon as part of the route has been calculated, the first driving recommendation will appear, accompanied by a spoken recommendation.

Restarting interrupted route guidance

- Plus Point: If you interrupt route guidance, to take a longer break, for example, you can restart route guidance conveniently from the main menu.

The main menu is currently active.

1. Mark "Start". Press **OK**.
The route will be calculated and a menu containing the data on the destination selected will appear. ✓

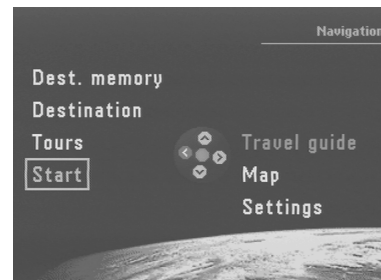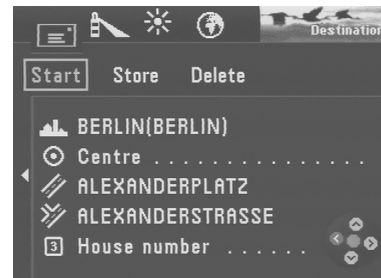

Adjusting the volume of the voice output

1. To adjust the volume of the voice output for the spoken recommendations, press ◀ or ▶.
A window in which you can adjust the volume will appear. ✓
2. Use ◀ ▶ to adjust the volume. Press OK.
You will now hear the spoken recommendations at this volume. ✓

Requesting destination and route information

After the route has been calculated, you can request destination and route information. Destination information consists of the complete destination address, the estimated driving time and the distance to the destination.


1. While route guidance is active, press the **i**-key for longer than 2 seconds.
The “Info” menu will appear. ✓


Viewing the route list

The route list lists the streets you are travelling on or will travel on.

Note:

The route list is updated regularly as you travel; it will indicate the road sections which still lie ahead. When a longer route has been calculated using the option of avoiding motorways, motorway sections might still appear on the list. As you approach this area, however, these sections will be deleted from the list.

1. Mark  on the top line of the “Info” menu. Press OK.
The route list will appear. ✓

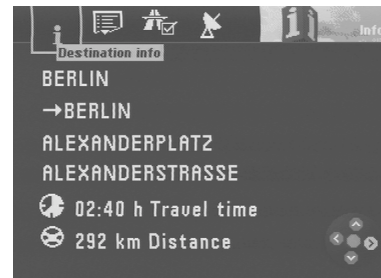

Route guidance in the arrow symbols mode

When you use route guidance with arrow symbols, arrows will appear in the display to indicate the direction in which you must drive as described by the spoken recommendations. This display mode also includes other information, such as the current distance to the destination, the remaining driving time, the name of the road on which you are currently travelling and the name of the road onto which the next turn will be made.

Overview

- ① Arrow
- ② Distance to destination
- ③ Driving time
- ④ Name of the road you are currently travelling on
- ⑤ Name of the road onto which the next turn will be made
- ⑥ Bar indicating the distance to the next turn
- ⑦ TMC station name (here: NDR2)



Activating the symbol display mode

1. To switch from the map display to the symbol display, press **OK** during the map display.
A selection menu will appear on the bottom left edge of the display. ✓
 2. Mark "Arrow symbols". Press **OK**.
Route guidance will continue using the arrow symbols. ✓
- Plus Point: When you open the selection menu, the last function selected is always marked.



Route guidance with map display

When you use route guidance with the map display, you can select a map showing your position surroundings (current vehicle position) or the destination surroundings.

The map showing your position surroundings changes in its alignment to indicate your driving direction ("Automatic") or can be made to point due north. In addition, you can select map display with "Junction zoom". This means that the small scale used during route guidance, e.g. 500 m, will automatically switch to a larger scale, e.g. 100 m, when you approach a junction. After you have completed the turn, the map will automatically revert to the scale used previously.

In addition, you can also conveniently select an overview map to show the entire route.

In each of the different map modes, it is also possible to display other additional information, such as driving time, driving distance, petrol stations, car parks and tourist attractions.

For more information on route guidance with map display, refer to the "Quick Reference", "Example of route guidance with map display".



Activating the map display

1. If route guidance last used the arrow symbols mode, you can easily switch to the map mode. Press **OK** during the arrow symbols mode.
A selection menu will appear on the bottom left edge of the display. ✓
2. Mark "Map". Press **OK**.
Route guidance will continue in map mode. ✓



Overview

- ① The driving direction arrow indicates your current vehicle position and driving direction.
- ② Left-hand information window contains information on the remaining driving time, driving distance and the status of the function for “traffic congestion” and “TMC”.
- ③ Right-hand information window with arrow symbol and distance bar graph.
- ④ A coloured line marks the route on the map.
- ⑤ Name of the road you are currently travelling on
- ⑥ Name of the road onto which the next turn will be made
- ⑦ TMC station name for dynamic navigation

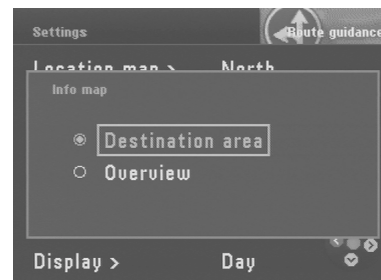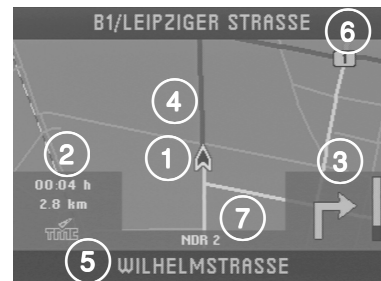

Selecting the information map (Destination area, Overview)

You can activate an information map for the destination area or an overview map for the entire route.


1. Press **OK** to open the selection menu.
Select “Settings”. Press **OK**.
The “Settings” menu will appear. ✓
2. Select “Info map”. Press **>**.
A selection list for the type of information to be displayed will appear. ✓
3. Select the desired information map. Press **OK**.
Route guidance will continue using the information map selected. ✓

Route guidance

Selecting the current position map (North, Automatic, Junction zoom)

There are three different display modes for the current position map:

- Map due north (“North”),
 - Map in driving direction (“Automatic”) and
 - Map in driving direction or due north (depending on the scale), map scale is adjusted accordingly (Junction zoom”).
- Plus Point: If you select “Junction zoom”, the map scale will change automatically to show more detail just before a turn is to be made.
1. Press **OK** to open the selection menu.
Select “Settings”. Press **OK**.
The “Settings” menu will appear. ✓
 2. Select “Location map”. Press **>**.
A selection list for the type of information to be displayed will appear. ✓
 3. Mark the desired display mode. Press **OK**.
Route guidance will continue with the map selected. ✓

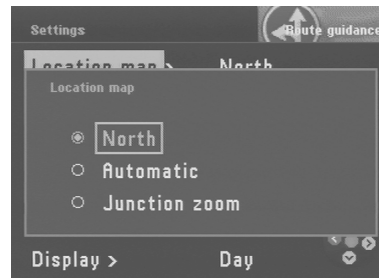

Adjusting the map scale

The map scale can be selected freely for every map. Scales ranging from 100 m to 500 km are available. This means that one centimetre on the display can represent from 100 m to 500 km.

1. Press **OK** to open the selection menu.
Select “Scale”. Press **OK**.
The “Change scale” menu will open. ✓
 2. Use **▲ ▼** to select the desired scale. Press **OK**.
The map will appear in the new scale. ✓
- Plus Point: You can also use **▲ ▼** directly in the map display to alter the scale.



Information on the map

You can also have such additional information as car parks and petrol stations displayed in symbol form on the map.

The following information can also be displayed on the map:

Exhibition centre	Motorway exit	Motorway service st.
Car rental	Train station	Shopping centre
Ferry	Airport	Restaurant
Border crossing	Hotel	Hospital
Authorities	Car park	Police station
Post office	Places of interest	Other destination
Sport facilities	Petrol station	Theatre/Culture
Car mechanics		

● Plus Point: You can select car mechanics for your make of vehicle.

1. Press **OK** to open the selection menu.
Select "Settings". Press **OK**.
The "Settings" menu will appear. ✓
2. Select "Map info". Press **OK**.
A selection list containing the information available will appear. ✓
3. Mark the information you want displayed on the map. Press **OK** for each selection.
A "checkmark" should appear in front of every type of information you want displayed. ✓
- Plus Point: On the top line of the menu you can either select or unselect all of the information at once. Make the desired selection.
4. Once you have selected all of the information you want displayed on the map, press **<**.
"OK" on the top line of the menu will be marked. ✓



Route guidance

5. Press **OK**.
The “Settings” menu will appear. ✓
6. Press **→**.
The map displaying the information selected will appear. ✓

Driving time and driving distance on the map


The following is displayed on the map as navigation information:

- Information window on the left indicating:
Driving time and driving distance
- Information window on the right indicating:
GPS status, map scale and a compass

In addition:

- TMC station name (only if the unit is able to receive a TMC source)
- Arrow symbols which indicate the driving recommendations and the driving direction up to the next turn

1. Press **OK** to open the selection menu.
Select “Settings”. Press **OK**.
The “Settings” menu will appear. ✓
2. Select “Info windows”. Press **OK**.
A selection list indicating the available information windows will appear. ✓
3. Mark the information windows you want displayed on the map. Press **OK**.
A checkmark will indicate the information windows selected. ✓
4. Once you have selected all of the information windows you want displayed, press **<**.
“OK” on the top line of the menu will be marked. ✓

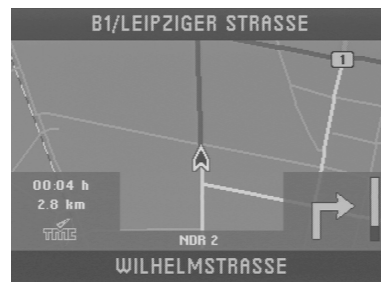


5. Press **OK**.
The “Settings” menu will appear. ✓
6. Press **→**.
The map containing the information windows selected will appear. ✓

Selecting the display mode for Day/Night/Off

You can set the TravelPilot DX-N display to day or night illumination or switch it off.

1. Press **OK** to open the selection menu.
Mark “Settings”. Press **OK**.
The “Settings” menu will appear. ✓
2. Mark “Display”. Press **OK**.
A selection of the available display modes will appear. ✓
3. Select the desired mode. Press **OK**.
The mode will change. ✓
If you have switched the display off, you can switch it on again by pressing any key.

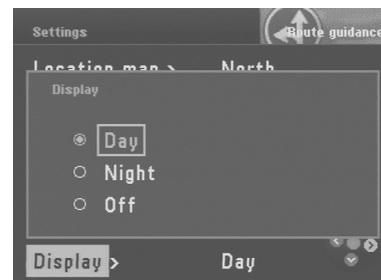










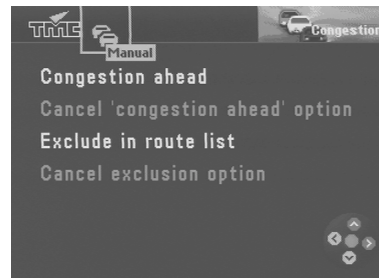
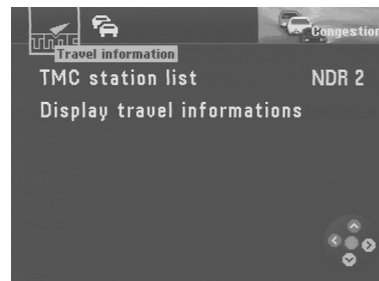
Using the traffic congestion function

Regardless of whether or not your TravelPilot DX-N is able to receive information from a TMC source ("TMC D-Namic tuner box" or appropriately equipped Blaupunkt car radio), you can enter a traffic congestion detour manually. As a result, you can alter your route quickly on the basis of the traffic situation (e.g. road works, closed sections of road, etc.). The TravelPilot DX-N will then calculate a new route to bypass the traffic congestion. In order to do this, you must know the distance of the beginning and the end of the traffic congestion from your current position.

You can also exclude entire roads from the route list.


Activating the traffic congestion function

1. To activate the traffic congestion function, press  on the remote control while route guidance is in progress.
The "Congestion" menu will appear. ✓
 2. Mark . Press .
 3. Select "Congestion ahead". Press .
 4. Mark the distance at which the traffic congestion is due to begin, i.e. the distance from your current vehicle position.
Press   on the remote control to set the arrow to the distance at which the traffic congestion will begin. The distances available for selection will depend on the course of the navigation route.
 5. Mark the second distance. This value indicates how far the end of traffic congestion is away from your current vehicle position.
Press   to select the distance to the end of the traffic congestion.
 6. Mark "Start". Press .
- Route guidance will appear, you will hear the following voice output: "The route is being calculated." ✓



Cancelling a traffic congestion detour

1. If the traffic situation improves, you can cancel a traffic congestion detour. In the “Congestion” menu for manual entries, mark the menu item “Cancel ‘congestion ahead’ option”. Press **OK**.
Route guidance will appear, you will hear the following voice output: “The route is being calculated.” ✓

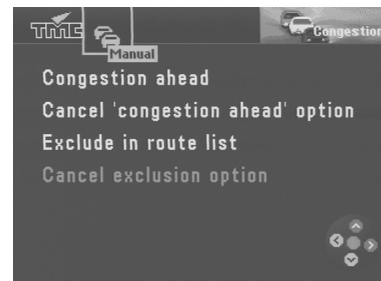

Excluding roads from the route list


1. You can also exclude entire roads from the route list. In the “Congestion” menu for manual entries, mark the menu item “Exclude in route list”. Press **OK**.
The route list will appear. ✓
2. Mark the first road you would like to exclude from the route list. Press **OK**.
If you want to exclude one road only, then do not mark any others and press **OK** again.
If you want to exclude several roads, move the selection bar to the last road. Press **OK**.
Route guidance will appear, you will hear the following voice output: “The route is being calculated.” ✓
- Plus Point: For longer roads you can also exclude certain sections, e.g. between two junctions. Roads which can be excluded in sections are marked by an arrow pointing to the right.
3. To exclude road sections, mark the road and press **>**.
The road sections will appear. ✓
4. Exclude the road sections in the same way as described for roads.



Route guidance

Cancelling road exclusions on the route list

1. If the traffic situation has improved, you can cancel road exclusions you have entered in the route list. Mark "Cancel exclusion option" in the "Congestion" menu. Press **OK**.
Route guidance will appear, you will hear the following voice output: "The route is being calculated." ✓

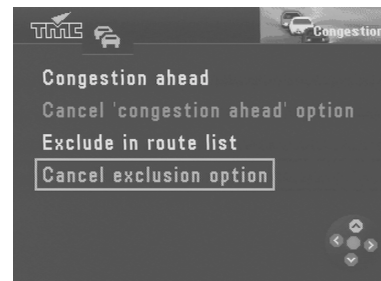

The TravelPilot DX-N TMC function makes it possible to use dynamic route guidance (currently available in Germany only) to avoid traffic congestion. To do so, the TravelPilot DX-N evaluates incoming TMC traffic information, adjusts the route planning to the current traffic situation and indicates the traffic information in symbol form in the map display mode.

- **Plus Point:** The TravelPilot DX-N always calculates the optimum route in terms of travelling time; i.e. if a detour around traffic congestion increases travelling time significantly, the TravelPilot DX-N would remain on the route passing through the traffic congestion under certain conditions. This depends on what kind of traffic congestion has been reported and how long it is and on how long the possible detour is.

Dynamic route guidance is only possible when the TravelPilot DX-N is connected to a TMC receiver.

TMC receivers include the “TMC D-Namic tuner box”, which was specially developed for the TravelPilot DX-N, and a number of Blaupunkt car radios.

Please contact your authorized Blaupunkt dealer or ring the Blaupunkt telephone hotline (the hotline number is listed on the last page of this instruction manual) to find out which Blaupunkt car radios can be used in conjunction with the TravelPilot DX-N.


- **Plus Point:** If you have neither a “TMC D-Namic tuner box” nor a suitable Blaupunkt car radio, you can still enter traffic congestion detours manually. For more information, refer to the section on “Route guidance”, “Using the traffic congestion function”.

Switching TMC on/off

The TMC function is switched on or off in the Route options menu. For more information, refer to the section on “Selecting route options”.



Note:

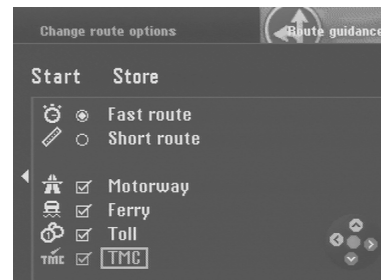If the TMC function is switched on, the options for “Fast route”, “Motorway”, “Ferry” and “Toll” will be selected automatically in the menu. If you switch off one of these options, the TMC function will switch off automatically as well.



Selecting a TMC station

If it is possible to tune into more than one TMC station, you can select a station.


1. Press  on the remote control.
The “Congestion” menu will appear. ✓
2. If the “TMC D-Namic tuner box” is connected, select the “TMC station list”.
For a TMC car radio, select “TMC search”. Press .

TMC D-Namic tuner box: the TMC station list will appear. ✓


Note:

If there are no TMC stations in your reception area, you will hear a beep.

TMC car radio: If the radio is not tuned into a TMC station, a TMC search will begin. ✓

3. For the “TMC D-Namic tuner box”, select the TMC station. Press .
The TMC car radio will automatically tune into a TMC station.
The “Congestion” menu will appear. The TMC station currently selected will appear next to the menu item. ✓

- Plus Point: The “TMC D-Namic tuner box” will automatically use the TMC station you have selected (preferred station). This means that after you leave the reception area served by your preferred station (the system will tune into a different TMC station) and return again later, this is the station that will be selected even if other TMC stations are available. This intelligent switching function means that the station indication may change frequently in the reception area as well. This ensures that you always receive all of the traffic information which is transmitted by the TMC stations within reception range.

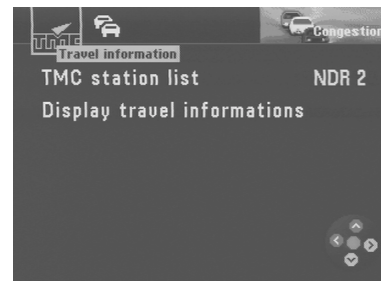


Displaying travel information

You can also have all of the traffic information received via TMC displayed. This information will cover an area within a radius of approx. 100 km around your current vehicle position.

1. Mark "Display travel information" in the "Congestion" menu. Press **OK**.
The first TMC traffic message on the list will appear. ✓
The number of the message on display and the total number of messages on the list will appear on the top line of the menu. Press **▲** **▼** to "page" through the messages.

Calculating the route with TMC while route guidance is in progress

The traffic messages are transmitted by TMC stations along with their regular programming. If a traffic message affects the route calculated, then a new route to the selected destination will be calculated automatically. You will hear the following voice output: "The route is being calculated taking traffic reports into account".

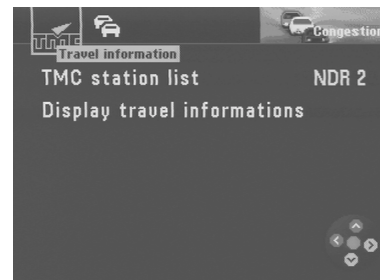

Selecting route options

You can select a number of route options for route calculation to meet your individual needs.

You can always select between the short and the fast route. In addition, you can use or avoid motorways, toll roads, ferries and switch dynamic route guidance (TMC) on or off. (For more information on dynamic route guidance, refer to the section on “Dynamic route guidance with TMC”).

- **Plus Point:** You can alter and save the route options for any single route or for route guidance in general.

Some of the route options are mutually exclusive. Dynamic route guidance, for example, can only be used in conjunction with the options “Fast route”, “Motorway”, “Ferry” and “Toll”.



Altering route options prior to route guidance

After you have started route guidance, you will see an information menu containing data on the current destination, you will also hear the following voice output: “The route is being calculated.” Now you can alter the route options.

1. When “Change route options” is marked, press **OK**.
The “Change route options” menu will appear. ✓
The active route option for “Short route” or “Fast route” is marked with a dot.
The other active options are marked with a checkmark.

Activating/deactivating route options

2. Move the selection bar to the option you want to alter. Press **OK**.
A checkmark will appear or disappear. ✓
3. Select “Start”. Press **OK**.
The route will be calculated using the new options. ✓

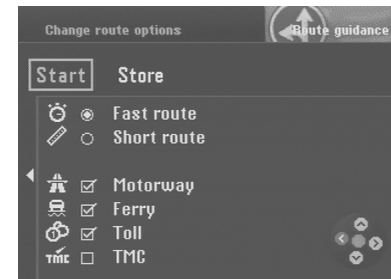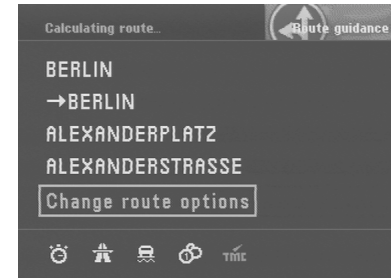

Altering the route options while route guidance is in progress

It is possible to alter the route options while route guidance is in progress in the “Settings” menu for route guidance.

1. Press **OK** while route guidance is in progress.
A selection menu will appear. ✓
2. Select “Settings” in the selection menu. Press **OK**.
The “Settings” menu will appear. ✓
3. Plus Point: In the “Settings” menu you can see at a glance which route options are active and which are not.
3. Select “Route options” in the “Settings” menu. Press **OK**.
The “Change route options” menu will appear. ✓




You can also alter the route options in the “Info” menu.

1. Press down the **i**-key for longer than 2 seconds while route guidance is in progress.
The “Info” menu will appear. ✓
2. Mark **i** on the top line of the menu. Press **OK**.
The route options menu will appear. ✓

Saving your settings

Save the currently selected settings if you want to use them for future route guidance.

1. Once you have made the settings, press **<**.
“Start” will be marked on the top line of the menu. ✓
2. Mark “Store”. Press **OK**.

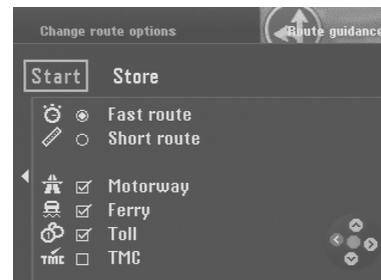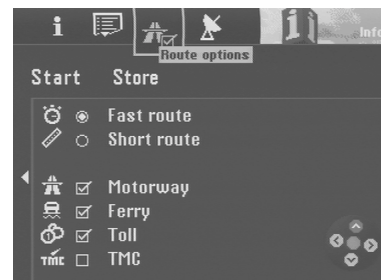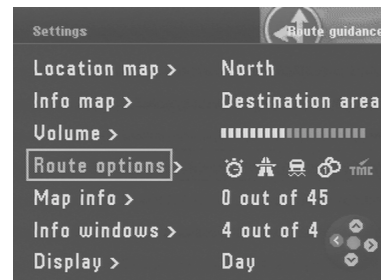


Destination memory

You can use the destination memory to name (for identification purposes) and save frequently used destinations. You can then retrieve these destinations from a list sorted according to your own criteria or alphabetically. The TravelPilot DX-N also automatically saves the last twelve destinations used. These destinations can be retrieved from the destination memory for route guidance and you can identify them with a short name and save them.

For more information on how to use destinations in the destination memory for destination entry, refer to the section on “Entering destinations”, “Destinations in the destination memory”.

Accessing the destination memory

From the main menu:

1. Mark “Dest. memory” in the main menu. Press .

The “Dest. memory” menu will appear. ✓

The icons in the top icon bar represent:



Memory for the last 12 destinations





Individually sorted destination memory



Alphabetically sorted destination memory





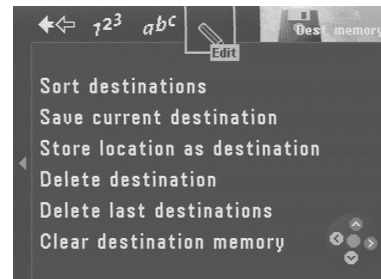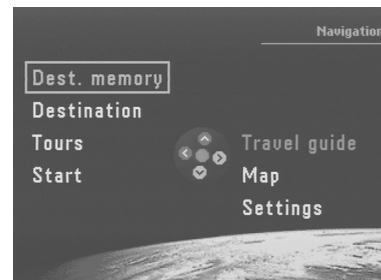




Edit destination memory (delete, save and sort destinations)







 Saving destinations

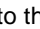
You can save your current destination or your current vehicle position as a destination.

Saving your current destination with a name

1. Mark  in the “Dest. memory” menu. Press .
The “Dest. memory - Edit” menu will appear. ✓
2. Mark “Save current destination”. Press .
The character set used to enter the destination name will appear. ✓
3. Enter a name for your destination as usual. Mark “OK” and press .
The “Store destination” menu will appear. ✓
4. Use   to move the name of the destination to the position in which you would like to save it in the destination memory. Press .
The “Dest. memory - Edit” menu will appear again. ✓

Saving your current vehicle position as a destination

-  **Plus Point:** It is very convenient to be able to save your current vehicle position as a destination when you get somewhere “en route” that you would like to return to later. This method also uses the most exact data, so that you can use route guidance to take you directly to the doorstep, rather than having to use a junction or house number block.
1. Mark  in the “Dest. memory” menu. Press .
The “Dest. memory - Edit” menu will appear. ✓
 2. Mark “Store location as destination”. Press .
The character set used to enter the destination name will appear. ✓

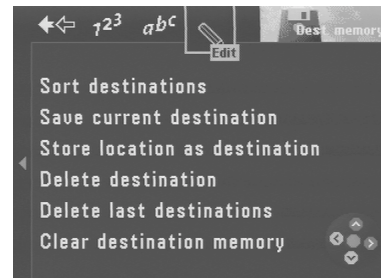

Destination memory

3. Use the character set to enter a name for the destination as usual. Mark "OK" and press **OK**.
The "Store destination" menu will appear. ✓
4. Use **▲** **▼** to move the name of the destination to the position in which you would like to save it in the destination memory. Press **OK**.
The "Dest. memory - Edit" menu will appear again. ✓

Deleting destinations from the destination memory


You can delete individual destinations, the last destinations and clear the entire destination memory.

Deleting a single destination

1. Mark "Delete destination" in the "Dest. memory - Edit" menu. Press **OK**.
The "Delete destination" menu will appear. ✓
2. Mark the destination you would like to delete. Press **OK**.
A pop-up inquiry requiring confirmation will appear. ✓
3. If you want to delete the destination, mark "Yes". Press **OK**.
The "Dest. memory - Edit" menu will appear again. ✓

Deleting the last destinations

1. Mark "Delete last destinations" in the "Dest. memory - Edit" menu. Press **OK**.
A pop-up inquiry requiring confirmation will appear. ✓
2. If you want to delete the last destinations, mark "Yes". Press **OK**.
The "Dest. memory - Edit" menu will appear again. ✓

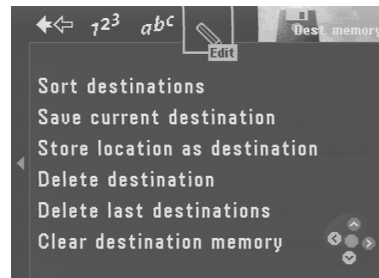


Clearing the destination memory

1. Mark "Clear destination memory" in the "Dest. memory - Edit" menu.
Press **OK**.
A pop-up inquiry requiring confirmation will appear. ✓
2. If you want to clear the entire destination memory, mark "Yes". Press **OK**.
The "Dest. memory - Edit" menu will appear again. ✓
3. If you do **not** want to clear the entire destination memory, mark "No".
Press **OK**.
The "Dest. memory - Edit" menu will appear again. ✓

Sorting the destination memory

You can save all of the destinations identified with a name in any order you choose (individually sorted destination memory, **123** symbol).

1. Mark "Sort destinations" in the "Dest. memory - Edit" menu. Press **OK**.
The "Choose destination" menu will appear. ✓
2. Mark the desired destination. Press **OK**.
3. Use **▲ ▼** to move the destination to the desired position. Press **OK**.
The "Dest. memory - Edit" menu will appear again. ✓

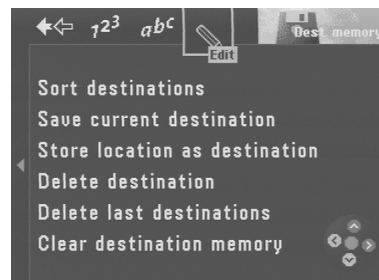

Tour memory

Use the tour memory to combine individual destinations to create a “tour”.

- Plus Point: With the help of the tour memory, you can easily plan sightseeing tours or business trips to customers.
- 1. To program the tour memory select “Tours” in the main menu. Press **OK**.
The tour list will appear (if there is no tour list available, the “Tour memory - Edit” menu will appear). ✓




Entering tour destinations

There are several ways in which you can enter tour destinations:

- Entering destinations directly including local destinations, non-urban destinations and destination entry on the map, as described in the sections on “Entering destinations” and the “Quick Reference”, “Direct destination entry in 10 steps”.
- Retrieving destinations from the destination memory
- Using the last destination used for navigation


Entering new tour destinations

1. To enter a new tour destination, mark “New tour destination” in the “Tour memory - Edit” menu. Press **OK**.
The “Destination” menu for the tour memory will appear. ✓
2. Enter the destination.
After you have entered the destination, the “Store destination” menu will appear. ✓
- Plus Point: Enter the destination in the same way as described for direct destination entry.
3. Move the tour destination to the desired position. Press **OK**.
The “Tour memory - Edit” menu will appear again. ✓

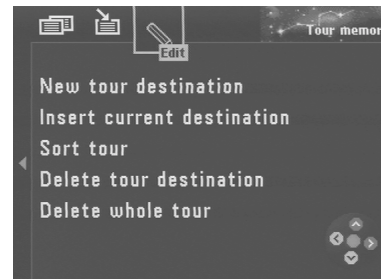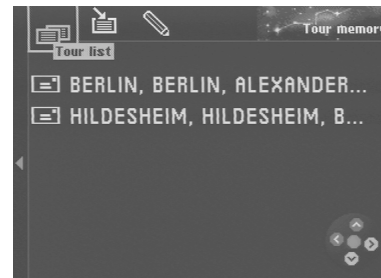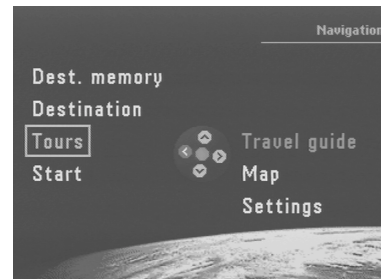


Retrieving destinations from the destination memory


You can retrieve destinations from the destination memory for the tour memory.

1. To retrieve destinations from the destination memory select  from the top line of the menu. Press **OK**.
The destinations in the destination memory will appear. ✓
2. Mark the destination you would like to use. Press **OK**.
The “Store destination” menu for the tour memory will appear. ✓
3. Move the tour destination to the desired position. Press **OK**.
The tour list will appear. ✓




Using the last destination used for navigation


1. To use the last (current) destination used for navigation, select  from the top line in the tour memory. Press **OK**.
The “Tour memory - Edit” menu will appear. ✓
2. Select “Insert current destination”. Press **OK**.
The character set used to enter a destination name will appear. ✓
3. Enter a name for the destination.
The “Store destination” menu for the tour memory will appear. ✓
4. Move the tour destination to the desired position on the tour list. Press **OK**.
The “Tour memory - Edit” menu will appear. ✓

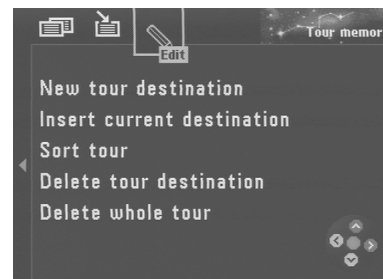


Sorting the tour list

1. If you would like to re-sort the tour list, mark  on the top line of the tour memory. Press **OK**.
The "Tour memory - Edit" menu will appear. ✓
2. Select "Sort tour". Press **OK**.
The tour list will appear. ✓
3. Mark the destination you want to move. Press **OK**.
4. Use **▲** **▼** to move the destination to the desired position. Press **OK**.
The "Tour memory - Edit" menu will appear. ✓
5. Repeat these steps until the list is in the order you want.


Deleting tour destinations

1. If you want to delete a tour destination from the tour list, mark  on the top line of the tour memory. Press **OK**.
2. Select "Delete tour destination". Press **OK**.
The tour list will appear. ✓
3. Select the destination you want to delete. Press **OK**.
A pop-up inquiry requiring confirmation will appear. ✓
4. Mark "Yes". Press **OK**.
The "Tour memory - Edit" menu will appear. ✓
The tour destination will be deleted.

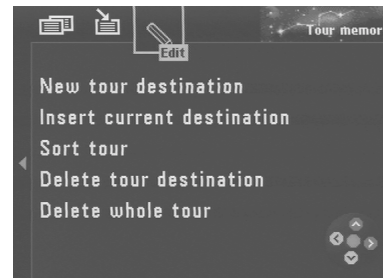

Deleting the whole tour

1. If you would like to delete a tour completely from the tour memory, mark on the top line of the tour memory. Press **OK**.
The "Tour memory - Edit" menu will appear. ✓
2. Mark "Delete whole tour". Press **OK**.
A pop-up inquiry requiring confirmation will appear. ✓
3. Mark "Yes". Press **OK**.
The "Tour memory - Edit" menu will appear. ✓

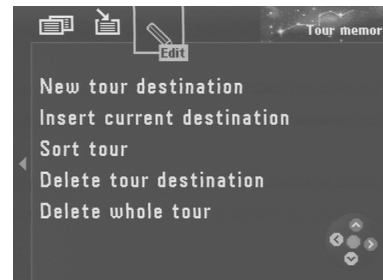


Starting route guidance to a tour destination

1. If you want to start route guidance, mark on the top line of the tour memory. Press **OK**.
The tour list will appear. ✓
2. Mark the destination on the tour list for which you want to start route guidance. Press **OK**.
An information menu containing the destination data will appear. ✓
You will hear the following voice output: "The route to your intermediate destination is being calculated."

After you have reached the first tour destination, route guidance will start automatically to guide you to the next destination on the tour list.

- Plus Point: The tour can be started from any destination.

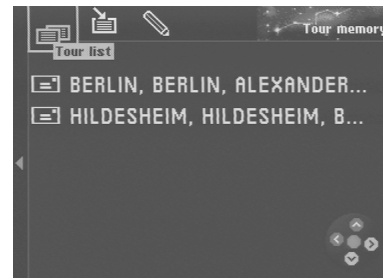

Travel guides

In combination with the travel guides, which are offered along with the navigation CDs, the TravelPilot DX-N is capable of much more. Using the travel guides it is possible to select destinations from such categories as tourist attractions, hotels, restaurants, historical buildings, etc.

- **Plus Point:** With the help of a travel guide and the TravelPilot DX-N tour function, you can easily plan and take sight-seeing tours. All you have to do is to save the individual destinations provided by the travel guide and transfer them from the destination memory to the tour memory.


Activating a travel guide

1. Select "Travel guide" in the main menu. Press **OK**.

Note:

Because the individual publishing companies are responsible for the features and the contents of the travel guides, we cannot provide a detailed description of the travel guides here. For more information, please refer to the operating instructions provided with the travel guide.


- **Plus Point:** All of the entries required for the travel guides are made in the same way as described for the TravelPilot DX-N.

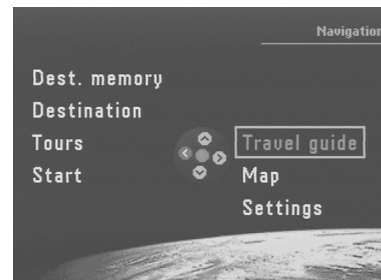

Map display without route guidance

While driving without active route guidance, you can use the TravelPilot DX-N to display a map of the surrounding area. This map can display all of the information available for navigation, e.g. parking garages and public facilities. For more information, refer to the section on “Route guidance”, “Route guidance in map mode”.


1. To use the map mode without route guidance, mark “Map” in the main menu. Press **OK**.
A map of the surrounding area will appear. ✓

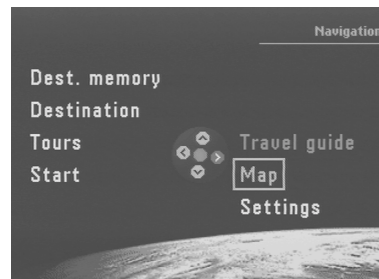

Displaying the GPS status and your position

You can also display the number of GPS satellites the system is currently able to receive and your geographical position. If the system is able to receive signals from at least three satellites, the TravelPilot DX-N will be able to calculate your current vehicle position.

1. Hold down **i** for longer than 2 seconds.
The “Info” menu will appear. ✓
2. Mark **Info** on the top line of the menu. Press **OK**.
A menu will appear, indicating the number of satellites currently received and your current vehicle position. ✓

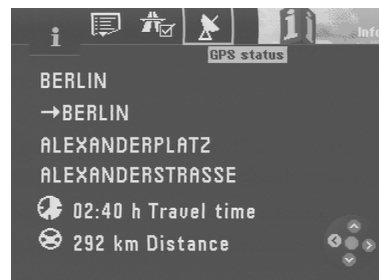





System settings

Accessing the main menu for system settings


The system settings for the TravelPilot DX-N can be altered by selecting the “Settings” menu item in the main menu.

1. Select “Settings” in the main menu. Press **OK**.
The “Settings” menu will appear. ✓

The “Settings” menu consists of four sub-menus. To access the sub-menus use the cog icons on the top line of the menu.



-  Audio/Video settings
-  Basic settings
-  Other settings
-  Calibration settings for the TravelPilot DX-N

Audio/video settings

1. Mark  on the top line of the “Settings” menu. Press **OK**.
The sub-menu for audio/video settings will appear. ✓

Selecting the language

1. To select the language for the menu displays and the voice output, select “Language”. Press **OK**.
A list of the available languages will appear. ✓
“Imperial” indicates that the distance is given in miles for English.
2. Select the desired language. Press **OK**.
The language selected will be loaded for navigation. ✓

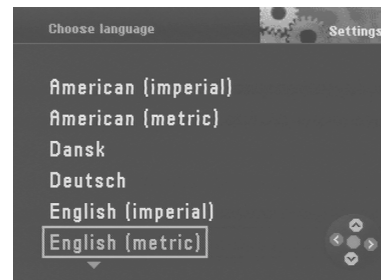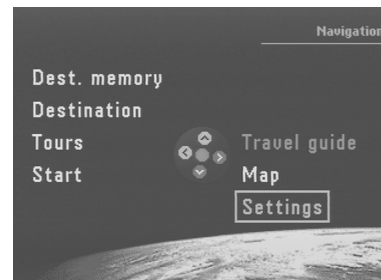

Adjusting the volume for voice output


1. To adjust the volume for voice output, select "Volume". Press **OK**.
A menu allowing you to adjust the volume will appear. ✓
 2. Use **<** **>** on the remote control to adjust the volume. Press **OK**.
The sub-menu for audio/video settings will appear. ✓
- Plus Point: While you are adjusting the setting, you will hear a short voice output each time you alter the volume. As a result, you always know exactly what volume you have selected.



Adjusting additional volume options

It is also possible to individually adjust the volume of the beep and GALA, the speed-dependent volume adjustment function. As driving speed increases, the noise level inside the vehicle increases as well. The volume adjustment function automatically adjusts the volume of the voice output.

1. Select "Volume". Press **OK**.
A menu for volume adjustment will appear. ✓
2. Select "More options". Press **OK**.
The "Volume - more options" menu will appear. ✓
3. Move the selection bar to the desired volume level. Use **<** **>** on the remote control to adjust the volume. Press **OK**.
4. Press **OK** twice.
The sub-menu for Audio/Video settings will appear. ✓

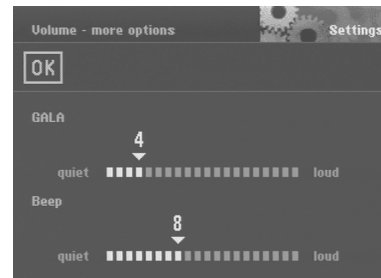


System settings

Selecting the display mode for Day/Night/Off

1. To select the display mode, mark "Display". Press **OK**.
A menu for the selection of the display mode will appear. ✓
 2. Select the desired mode. Press **OK**.
The selected mode is active. ✓
- Plus Point: You can also conveniently alter the display mode in the "Settings" menu for route guidance. For more information, refer to the section on "Route guidance", "Selecting the display mode for day/night/off".

If you have switched the display off, you can switch it on again by pressing any key.

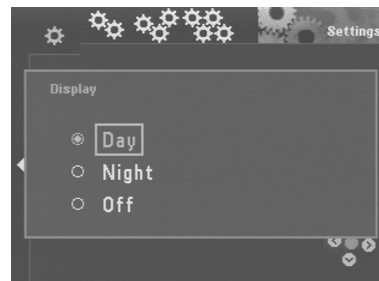

Selecting another source


You can also use an adapter to connect a video player or a TV receiver to the RGB input of the TravelPilot DX-N. Please contact your authorized Blaupunkt dealer or ring the Blaupunkt telephone hotline to find out which adapters are available.

Note:


To select the menu item "TV/Video", you have to activate "TV/Video" in the sub-menu for the basic settings first. For more information, refer to the section on "Activating TV/Video" in this chapter.

1. If you want to see the TV/video picture, select "Source". Press **OK**.
A menu which allows you to select the source will appear. ✓
2. Select the desired source. Press **OK**.
The mode selected will be activated. ✓

If "TV/Video" has been selected as the source, you can press any key on the remote control to return to the menu for selecting the source.

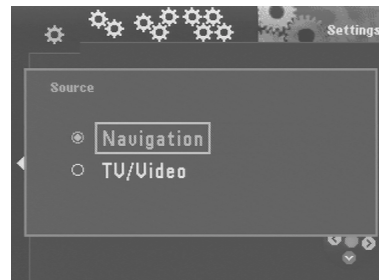

Basic settings

1. Mark  on the top line of the “Settings” menu. Press **OK**.
The sub-menu for audio/video settings will appear. ✓

Activating/deactivating the security code

1. If you would like to activate or deactivate the security code for the TravelPilot DX-N, select “Security code”. Press **OK**.
A menu in which you must enter the code number will appear. ✓
2. Mark the first digit in the code number. Press **OK**.
Repeat for the remaining digits in the code number. Then mark “OK” and press **OK**.
If you have entered and confirmed an incorrect code by mistake, you will not be able to repeat your entry until a waiting period has elapsed. During this period, the TravelPilot DX-N must remain switched on. “SAFE” will appear in the input field.




Switching the operating introduction on/off

1. If you would like to switch the TravelPilot DX-N operating introduction on or off, select “Operations info”. Press **OK**.
The operating introduction is active if it is marked by a checkmark. ✓

Activating TV/Video

If you would like to watch a TV/video source with the TravelPilot DX-N, you have to activate the TV/video option.

1. If you would like to activate the TravelPilot DX-N TV/video input, select “TV/Video”. Press **OK**.
The TV/video input is active if it is marked by a checkmark. ✓

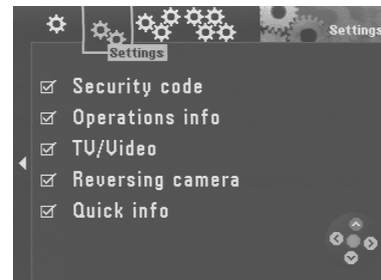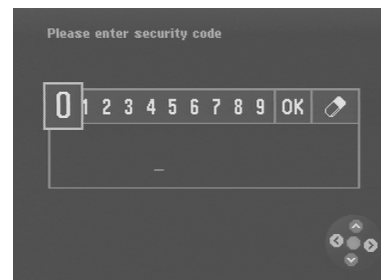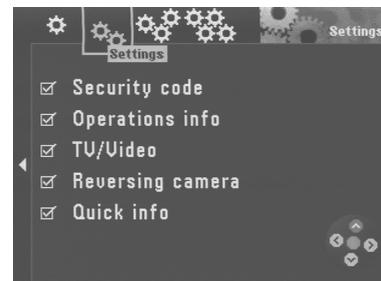

Activating the reversing camera

A special adapter is required to connect a reversing camera. Please contact your authorized Blaupunkt dealer or ring the Blaupunkt telephone hotline to find out which adapters are available.

1. If you use a reversing camera and want the picture provided by this camera shown on the TravelPilot DX-N display, select "Reversing camera".

Press **OK**.

The reversing camera input is active if it is marked by a checkmark. ✓


If connected properly, the reversing camera picture will appear automatically as soon as you put the car into reverse gear.

- Plus Point: The picture provided by the reversing camera is displayed as a mirror image horizontally. As a result, it looks just the same as the image in a rear-view mirror.



Switching the Quick info on/off

The Quick info indicates which menu functions can be activated by selecting the icons on the top line of the menu.

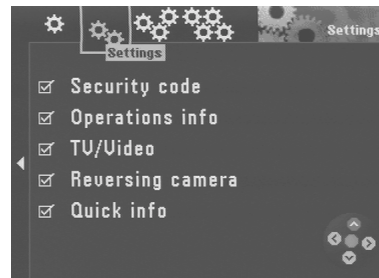1. If you want the Quick info to be displayed, select "Quick info". Press **OK**.
The Quick info is active if it is marked by a checkmark. ✓





Other settings



1. Mark  on the top line of the "Settings" menu. Press . The sub-menu for other settings will appear. ✓

Setting the standby time



You can select the amount of time that the TravelPilot DX-N will remain active after you have switched off the ignition. The standby times available are 0, 15, 30 and 45 minutes.


1. Select "Standby time". Press . A menu for the selection of the standby time will appear. ✓
2. Select the desired standby time. Press . The standby time selected will appear next to the menu item. ✓

Displaying the system version

1. To display the system version, select "Version". Press . The current system versions will appear. ✓
2. Press  to exit the menu.

Entering your current vehicle position manually

1. If you would like to enter your current vehicle position manually, select "Enter location". Press . A selection menu will appear. ✓
 2. Select the entry mode via town or map. Press .
- Plus Point: The entry is made in the same way as described for entering a destination.

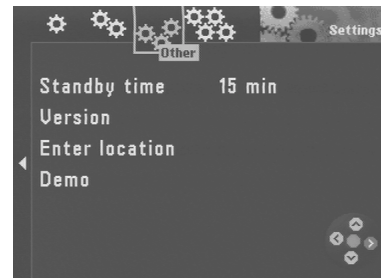

System settings

3. After you have entered the city/town, the street and the junction, you still have to set the direction and the distance from the junction to your vehicle position. Select the corresponding menu item and use < > to enter the information. Then mark "OK" and press **OK**.

Activating the demonstration mode


You can use the TravelPilot DX-N to simulate route guidance.

1. If you would like to activate the demonstration mode, select "Demo". Press **OK**.
A selection menu will appear. ✓
2. Select either the simple demonstration mode ("Normal") or a constant repeat ("Autorepeat"). Press **OK**.
Navigation will be reloaded. ✓


Note:

Destinations and tours programmed during the demonstration mode will not be saved in the destination memory when the demonstration mode has ended.


The demonstration mode remains active until the TravelPilot DX-N is restarted or until it is deactivated.

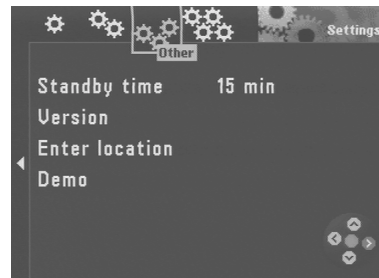

Deactivating the demonstration mode

1. If you would like to deactivate the demonstration mode, select  in the "Settings" menu. Press **OK**.
The sub-menu for other settings will appear. ✓
2. Select "Navigation". Press **OK**.
Navigation will be reloaded. ✓

Calibration settings

1. Mark  on the top line of the “Settings” menu. Press **OK**.
The sub-menu for calibration will appear. ✓

Calibration after changing the tyres


When the car tyres are changed, from summer to winter tyres for example, it might be necessary to calibrate the TravelPilot DX-N again.

1. Select “Tyre change”. Press **OK**.
A warning note will appear. ✓
2. If you want to calibrate the system, select “Continue” and press **OK**.
As soon as you begin driving, the TravelPilot DX-N will begin to update the calibration information stored.
This process is displayed in a status window. ✓

Installing the system again

If the TravelPilot DX-N is installed in a different vehicle, the entire calibration process must be performed again.

1. Select “New installation”. Press **OK**.
A warning note will appear. ✓
2. If you would like to perform a new installation for the system, select “Continue” and press **OK**.
All of the calibration data will be deleted. ✓
3. As soon as you begin driving, the TravelPilot will begin to calibrate the system.
This process is displayed in a status window. ✓

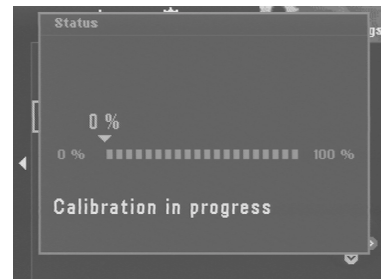

System settings

Displaying the calibration status

You can display the status of your system calibration.

1. Select "Status". Press **OK**.
A window indicating the current calibration status will appear. ✓
The status information is indicated in percent.



Available navigation CD-ROMs

Precise routes to your destination

The navigation CDs know the roads right down to the last detail; in many cities, it is even possible to select house numbers. The informative map displays your destination. Other convenient features include traffic congestion display, ferry connections and many destinations which can be selected directly, such as airports, car parks, petrol stations, etc. The following CDs are currently available:

Germany Plus - Benelux - Great Britain - Netherlands - Belgium/Luxembourg - Austria - Switzerland - France - Italy - Spain - Portugal - Scandinavia



Available travel guide CD-ROMs


Expert information

In addition to the road network, the travel guide CDs contain a wide variety of hotels, restaurants, tourist attractions, and much more. Detailed information can be selected according to distance away, price class, credit cards, etc. The following travel guide CDs are currently available:

Tele Atlas/Michelin Germany - Tele Atlas/Varta Guide Germany - Merian Scout Germany - MerianScout Germany Golf Special - Tele Atlas/Michelin Belgium, Luxembourg - Merian Scout Austria - Merian Scout Switzerland - Tele Atlas/ANWB Netherlands - Tele Atlas/Michelin France - Tele Atlas/De Agostini Italy



Changing the navigation CD-ROM

The CD-ROM cannot be changed unless the vehicle is stationary. To remove the CD-ROM press the  button. The CD-ROM will eject. With the label facing up, insert the new CD-ROM carefully into the CD slot until it is pulled into the CD player automatically.

Note:

For the TravelPilot DX-N use only those CD-ROMs which are labelled as "TravelPilot DX compatible".



Service numbers

	Tel.:	Fax:
Deutschland	0 18 05 00 02 25	0 51 21 49 40 02
Belgique / België	0 25 25 54 44	0 25 25 54 48
France	014 010 70 07	014 010 73 20
Nederland	023 565 63 48	023 565 63 31
Italia	02 3696331	
España	902 120 234	00 34 91 646 79 52
Great Britain	018 958 383 66	018 958 383 94
Danmark	44 89 83 60	44 89 86 44
Sverige	08 750 15 00	08 750 18 10
Norge	66 81 70 00	66 81 71 57
Suomi	094 359 91	094 359 92 36
Österreich	045 989 90 28	016 103 93 91
Ελλάς	015 762 241	015 769 473
Česká republika	026 130 04 41	026 130 05 14
USA	800-266 25 28	708-681 71 88
Singapore	006 535 054 47	006 535 053 12
Slovensko	042 175 873 212	042 175 873 229

Blaupunkt-Werke GmbH
Bosch Gruppe

